

Getting started:

StyliCleaner[®]

SC1-MB - Mounting bracket

(optional)




The solution to mount a StyliCleaner SC1 on a MRS-changing rack.

Package Contents

The following contents can be found in the package:


- A Cylinder (including)
 - 1 – Hex socket screw allen M8
 - 2 – T-Nut M8
 - 3 – Hex screw M8x20

- B Plate (including)
 - 4 – 2x Hex screw M8x20

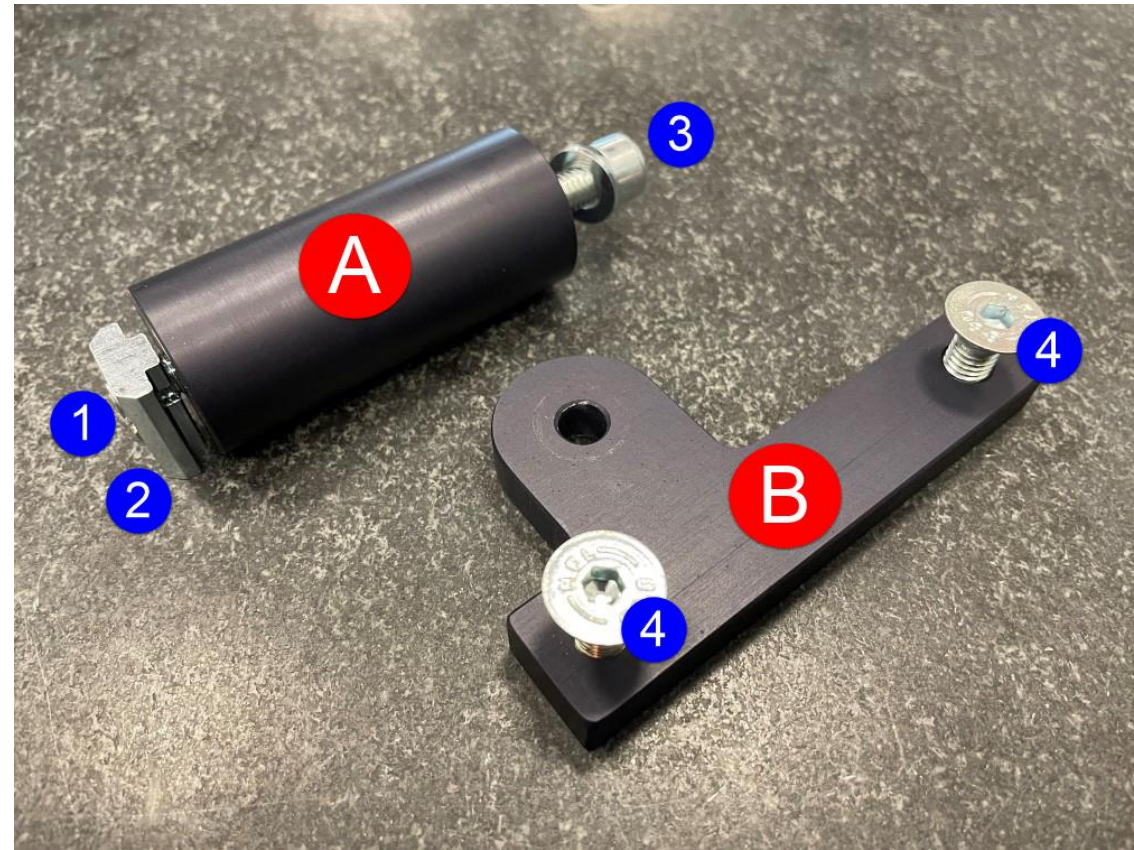

1) Mounting cilinder

- Remove the cap from the MRS-profile
- Insert the T-nut in the MRS profile
- Position the cylinder in the correct location
- Tighten the profile

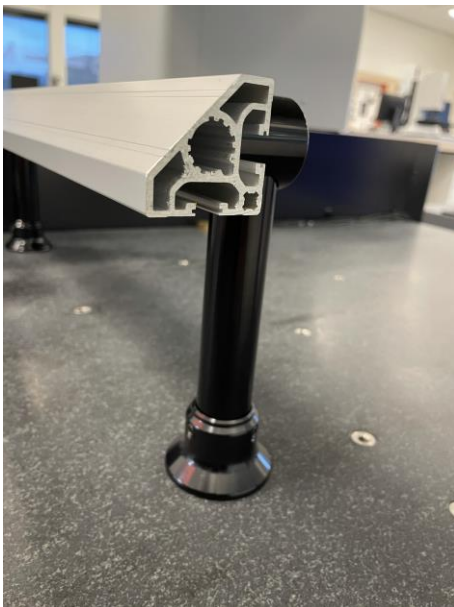

2) Mounting plate

- Mount the plate to the bottom of the cylinder
- Secure the StyliCleaner to the plate

