


Getting started:

StyliCleaner[®]

SC1-MBV - Mounting bracket ZX **(optional)**

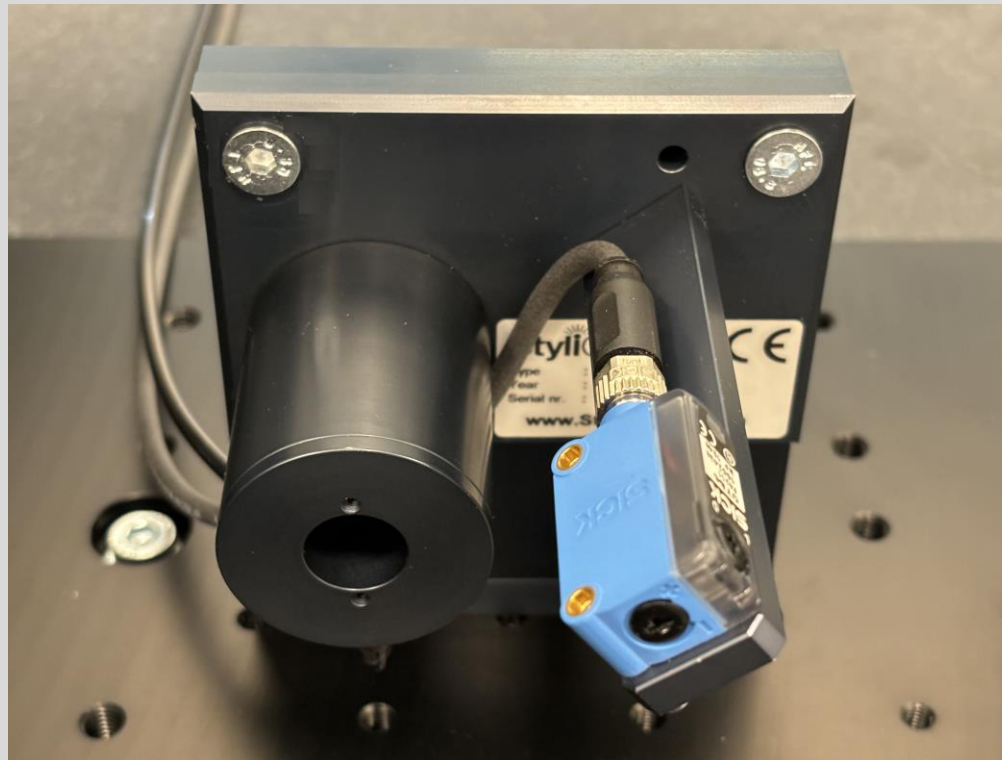


The solution to mount a StyliCleaner SC1 vertical on a CMM.

Package Contents


The following contents can be found in the package:

- 1 Mounting plate
- 2 Aligntool
- 3 Hex screw M8x20

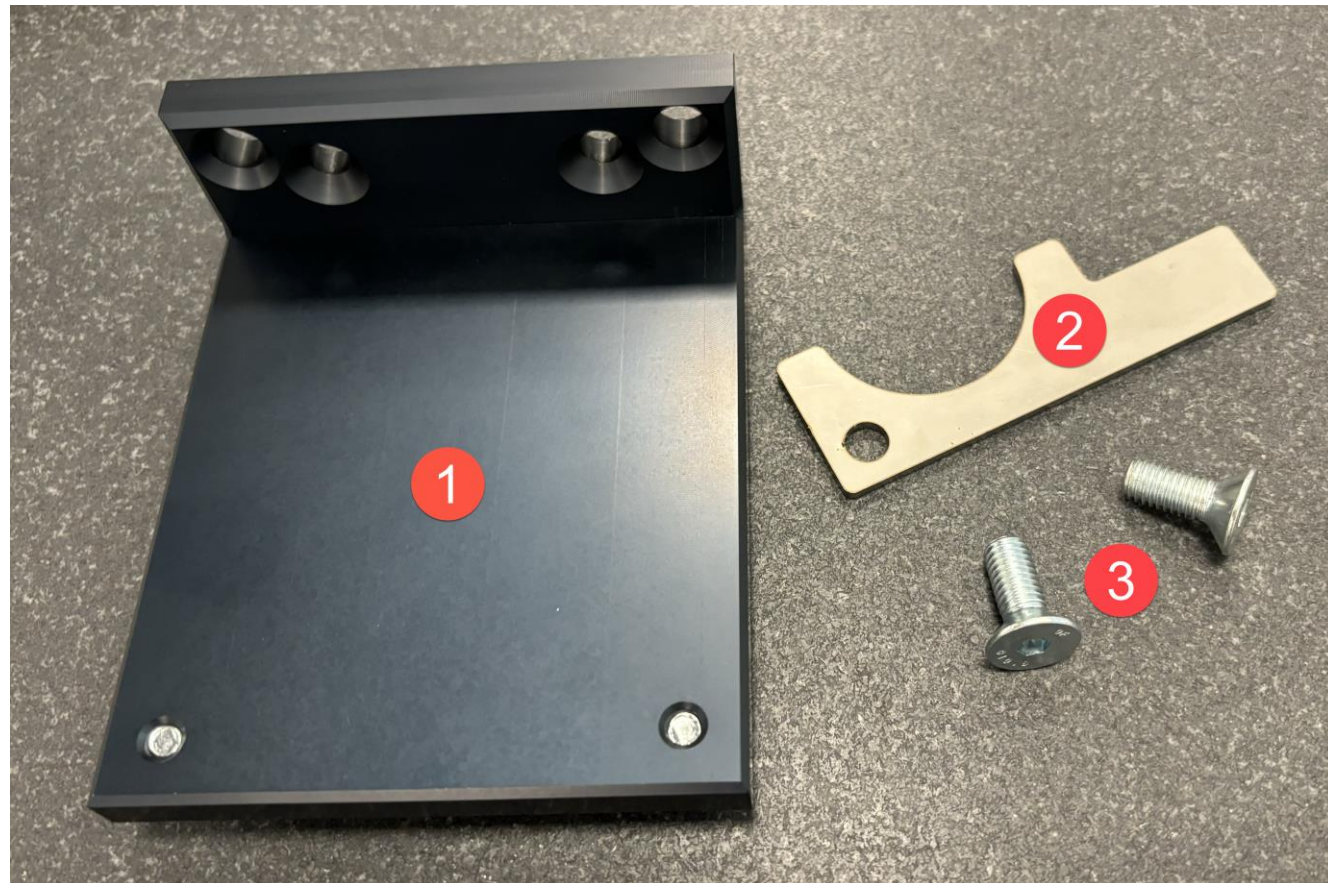


Changing direction photocell


1) Remove the photocell form the StyliCleaner.

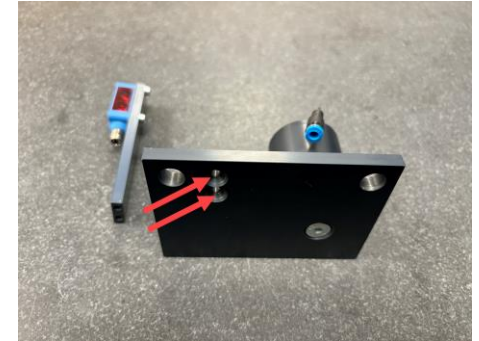

2) Align the photocell as shown →

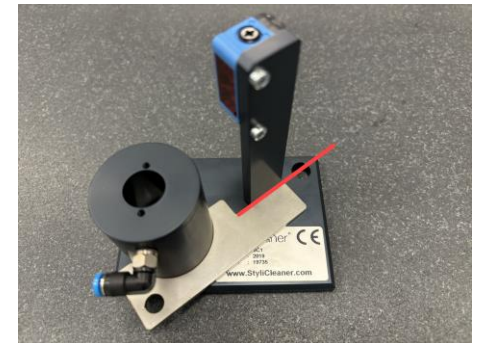

3) Tighten the photocell with only 1 crew at the bottom side.

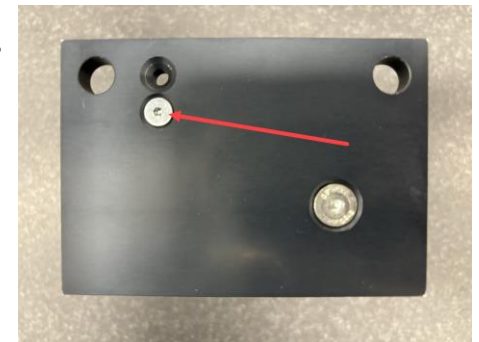

Rotating direction cleaning cylinder

4. Rotate the cleaning cylinder so, that the compressed air connection is at the front side.
5. Mount the adapter plate on the measuring machine
6. Mount the StyliCleaner on the adapter plate.
7. Connect the cable and the air hose to the StyliCleaner.

